



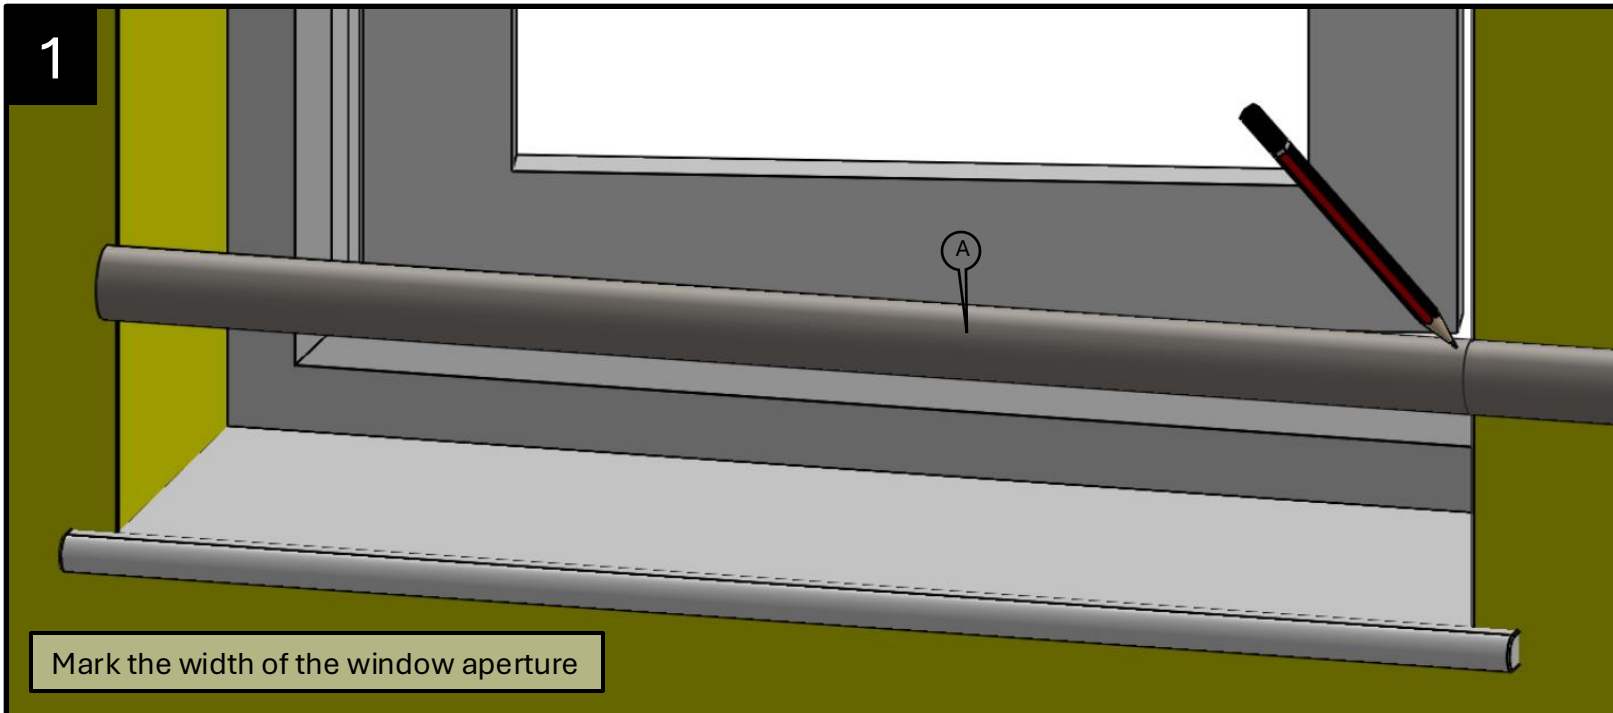


Bullfix Window Bar Installation Instructions

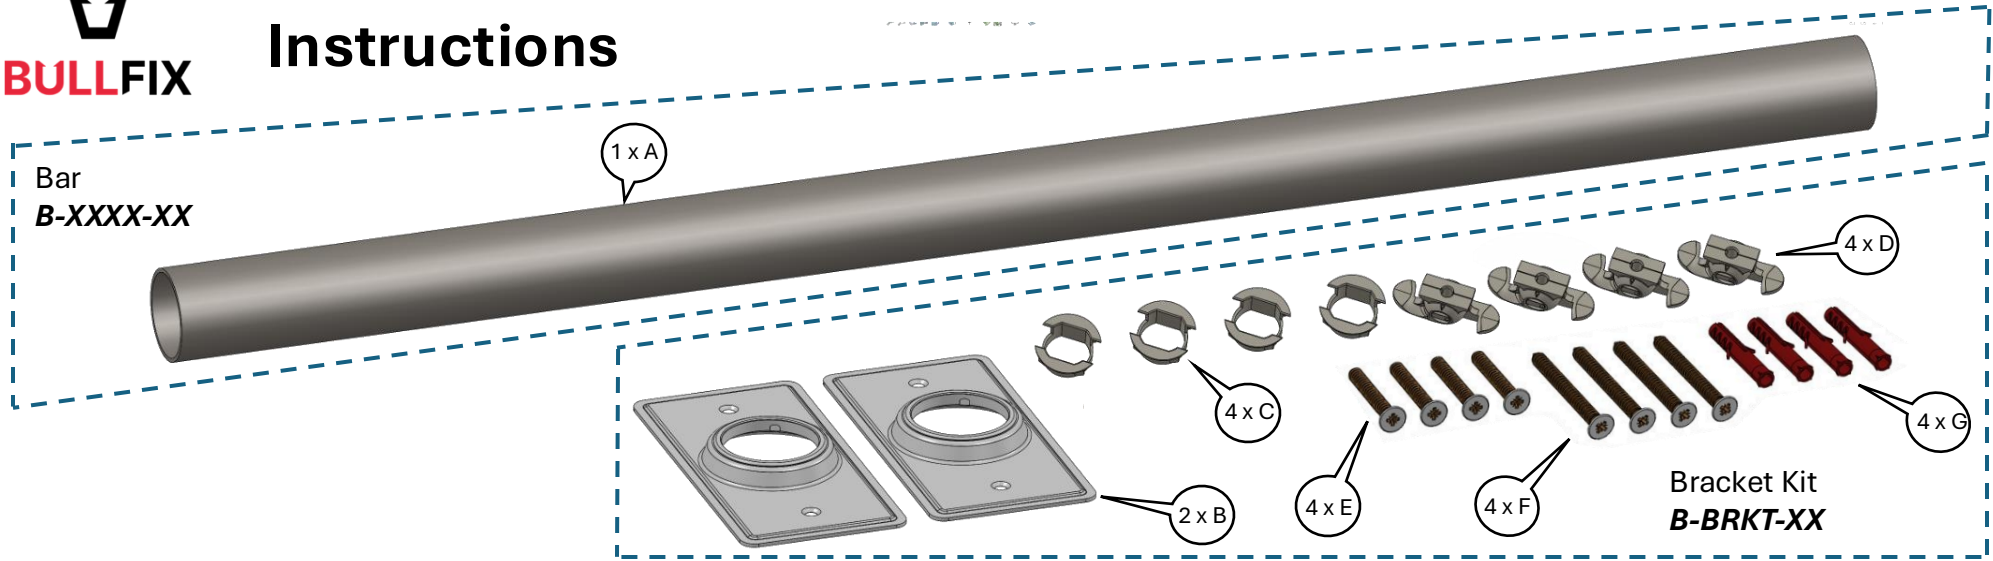


2


Cut the bar 5mm shorter

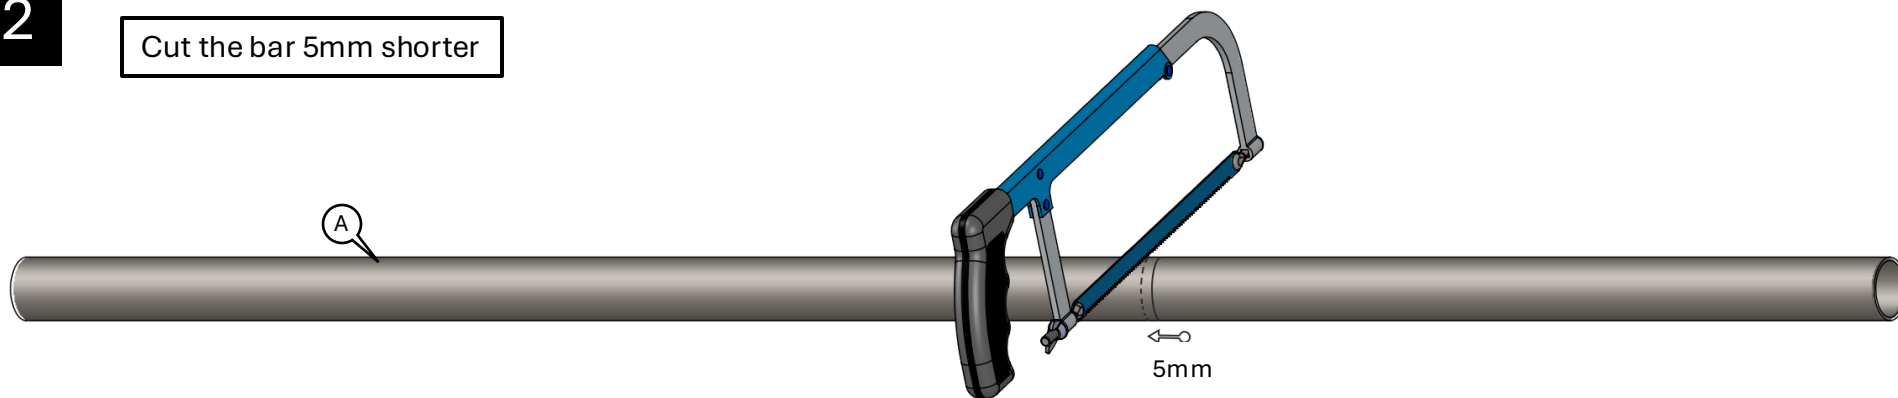

3

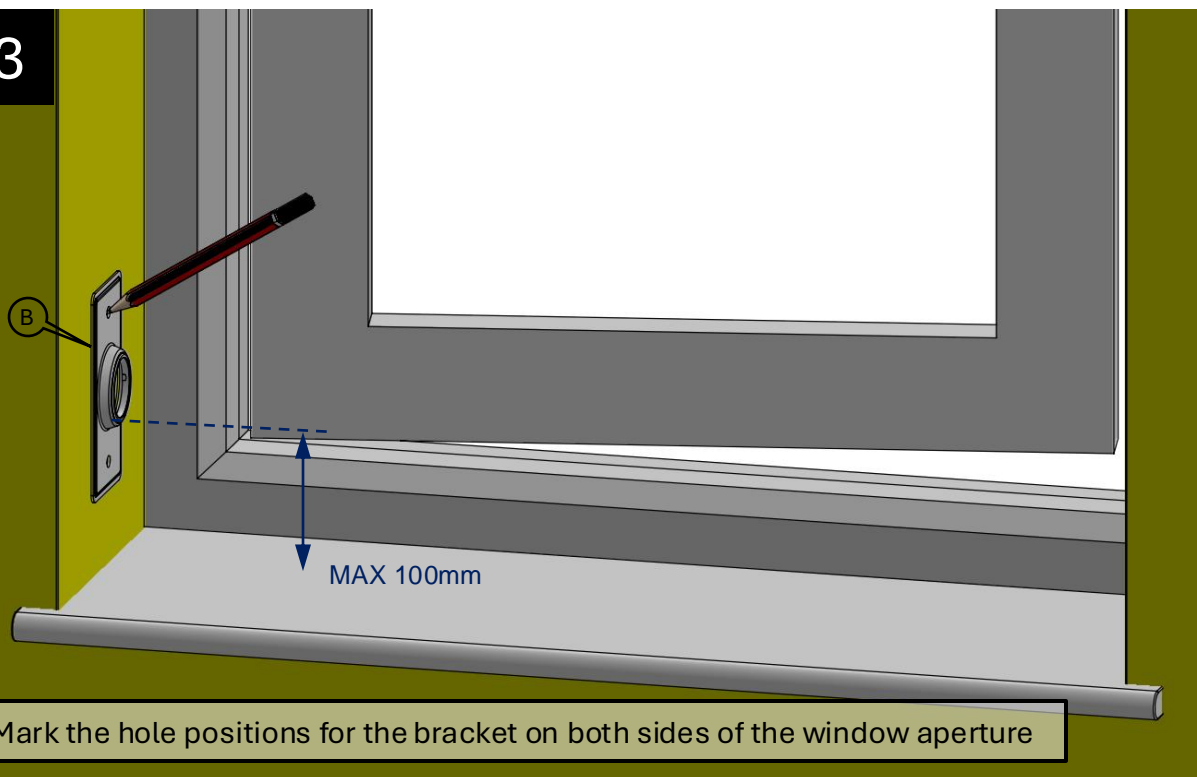


3b

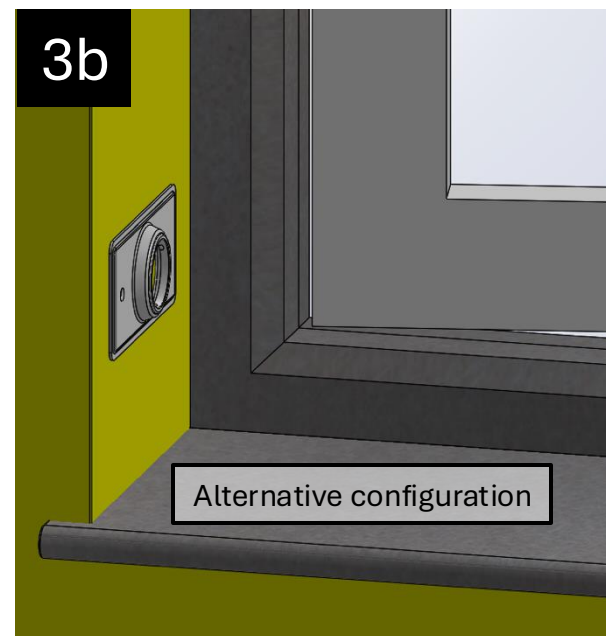

MULTIPLE FIXING METHODS


Plasterboard Cavity

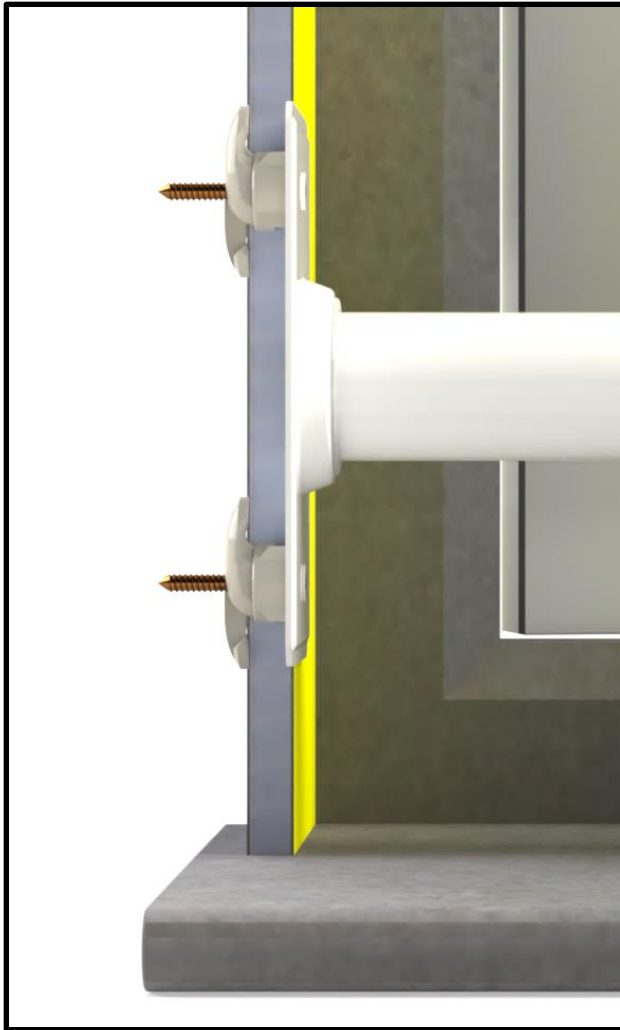




Wood Stud








Masonry

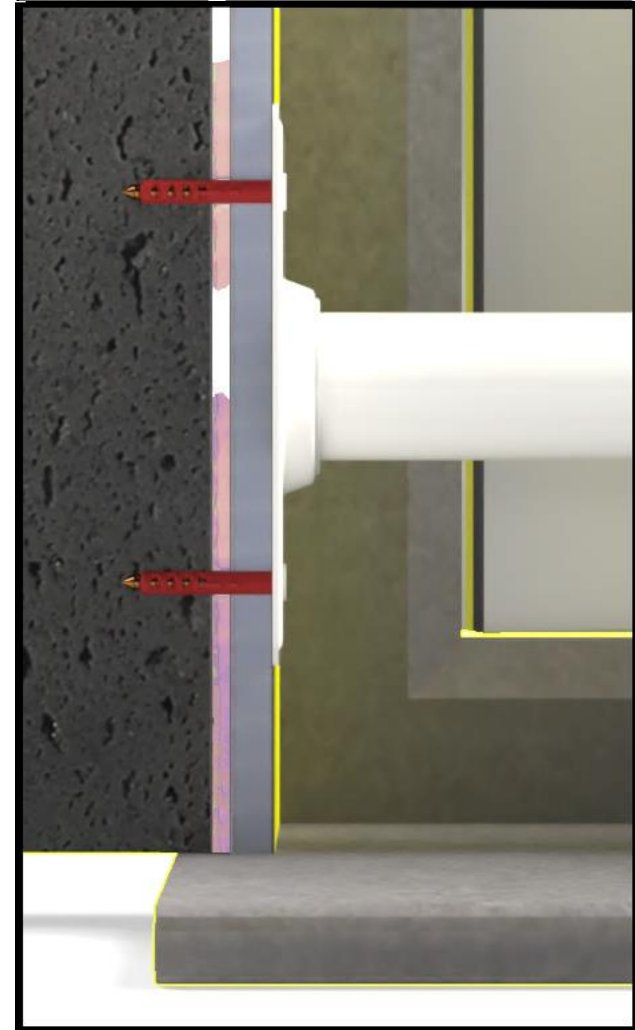




For Mounting To Plasterboard

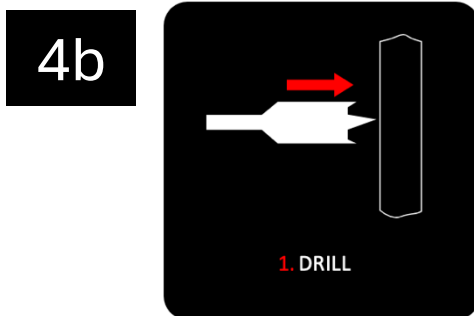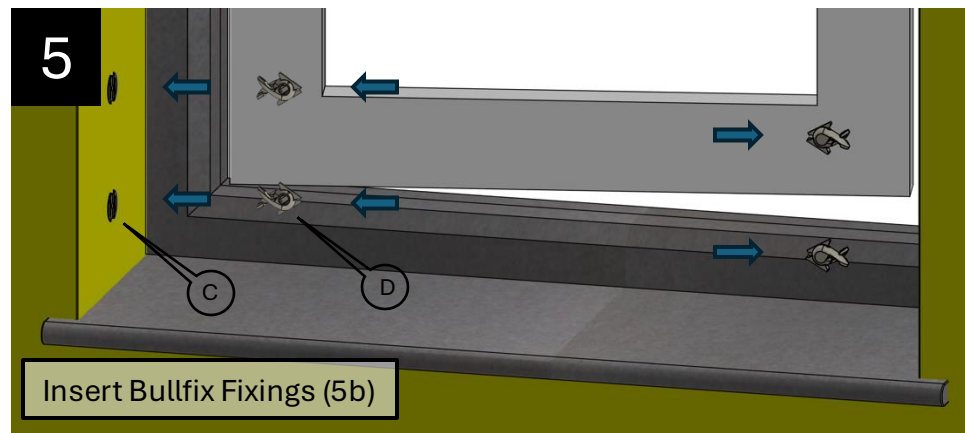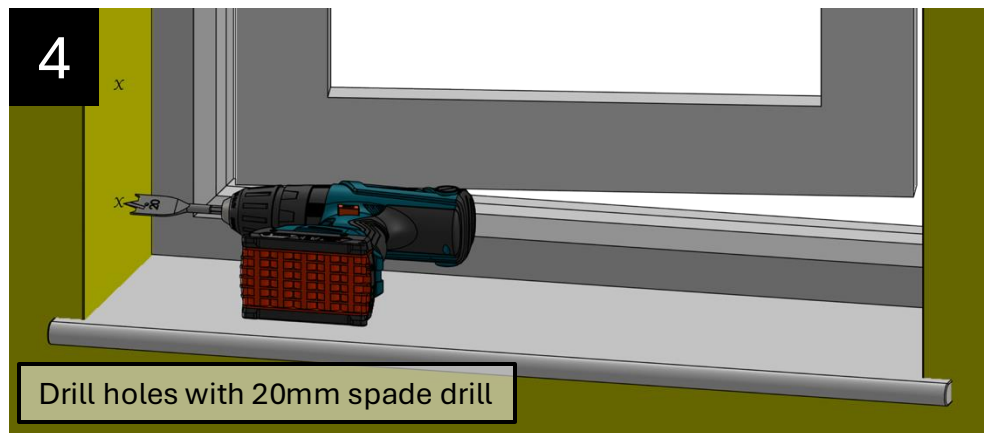





5b

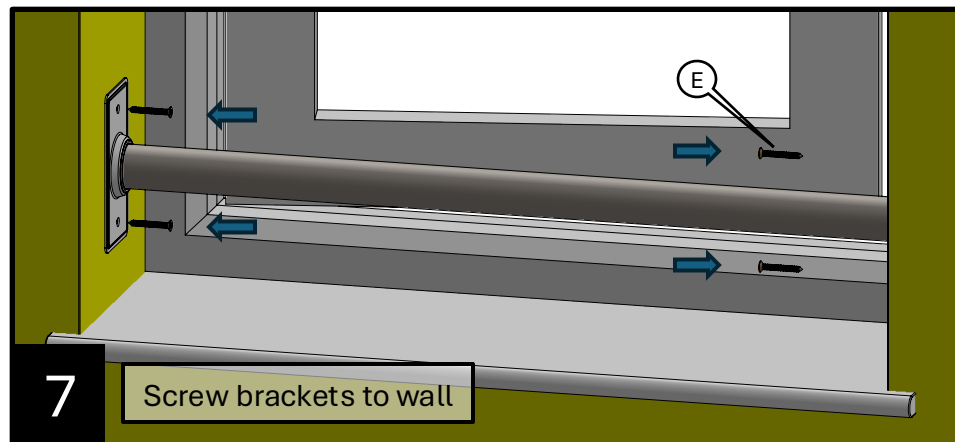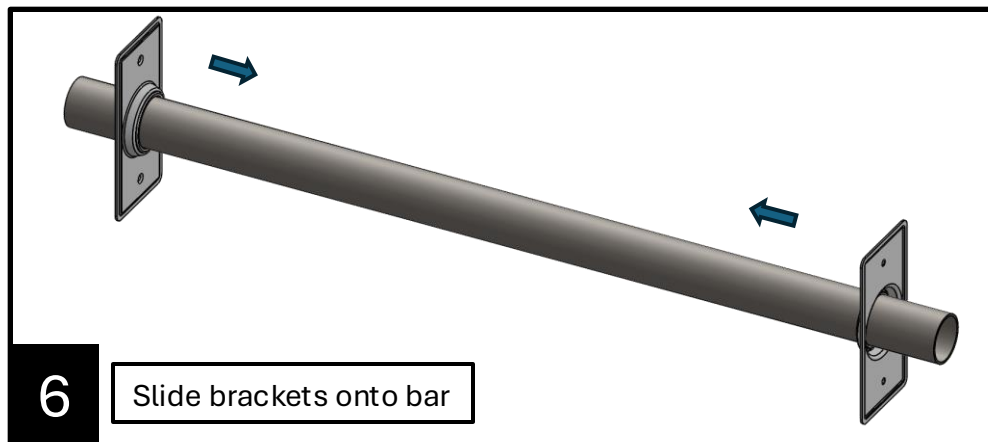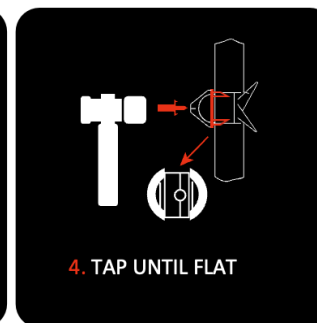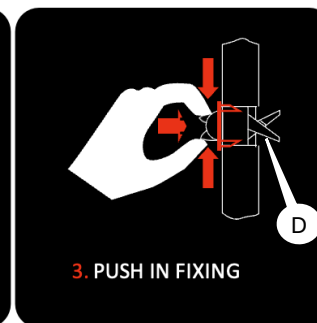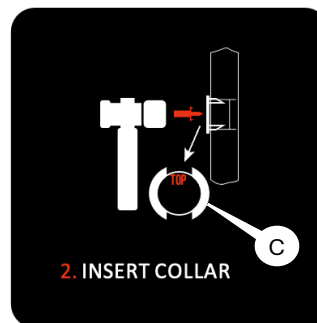

For Mounting To Wood Studs

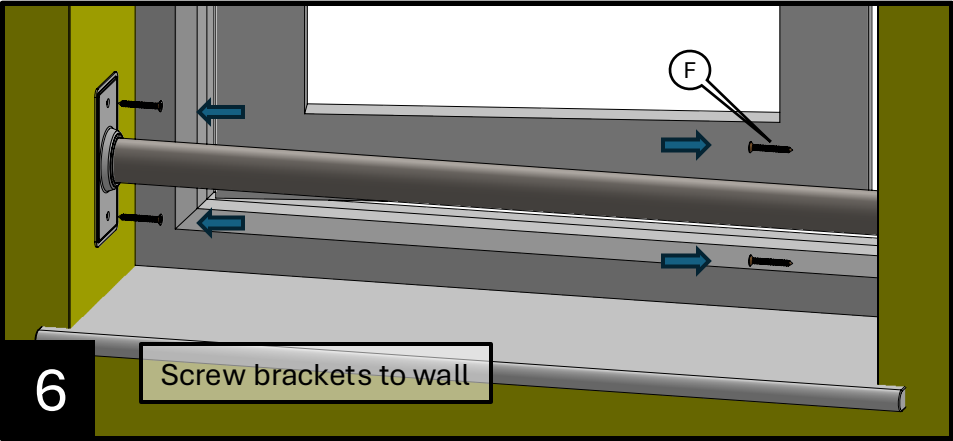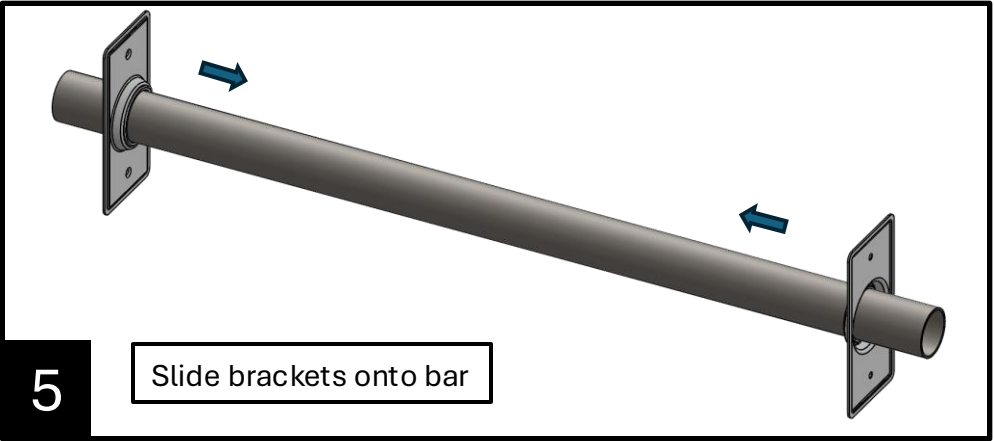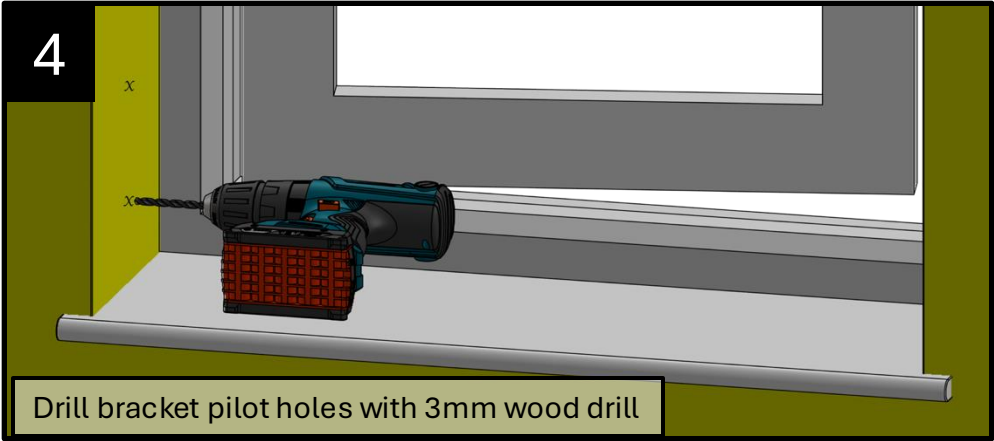

For Mounting To Masonry

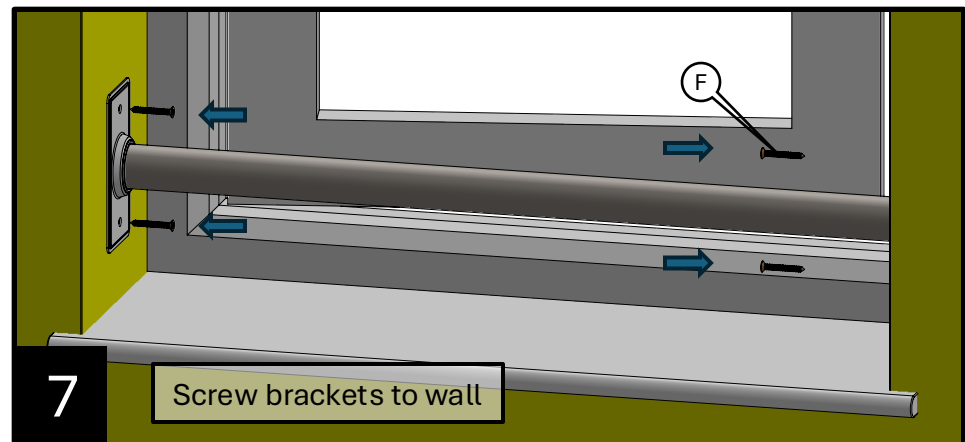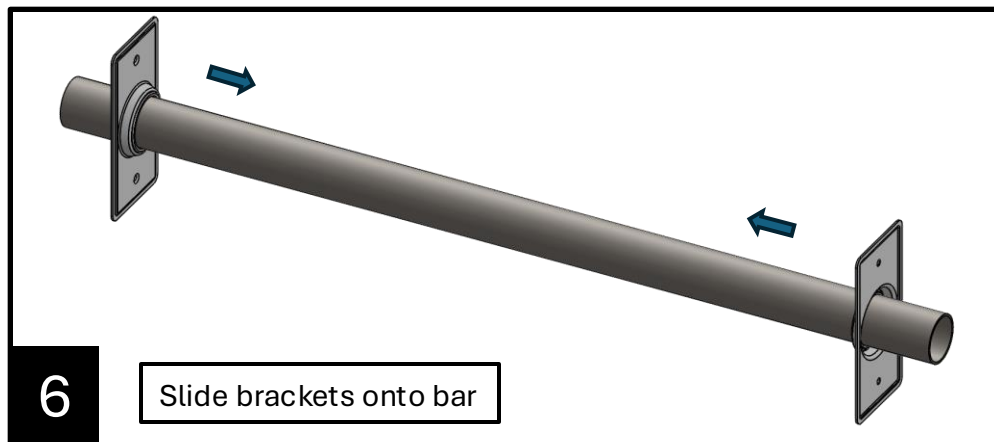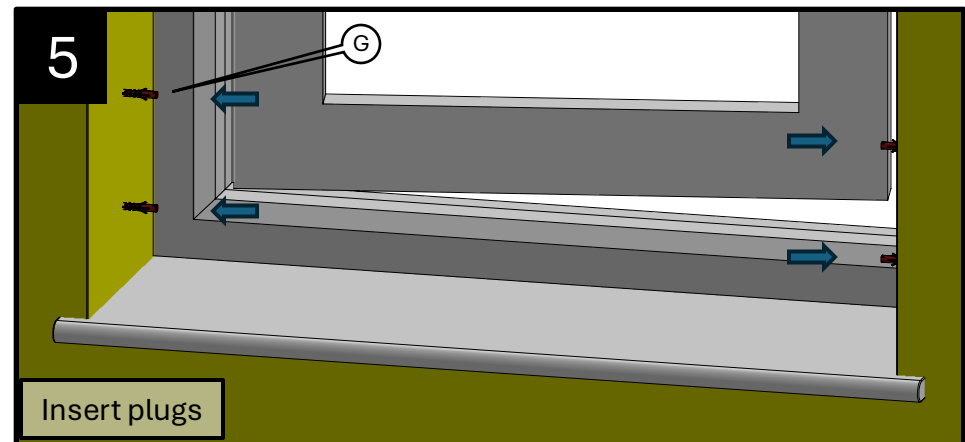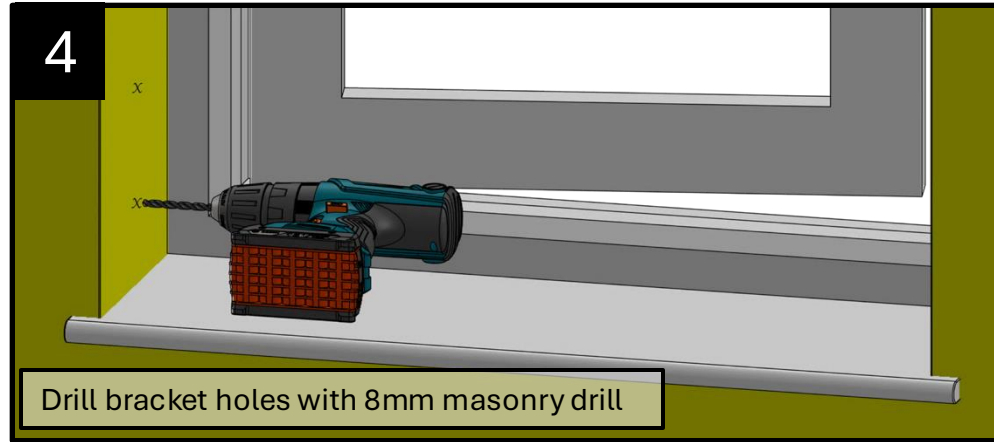



For more information on how to use Bullfix Plasterboard fixings scan this QR code

